
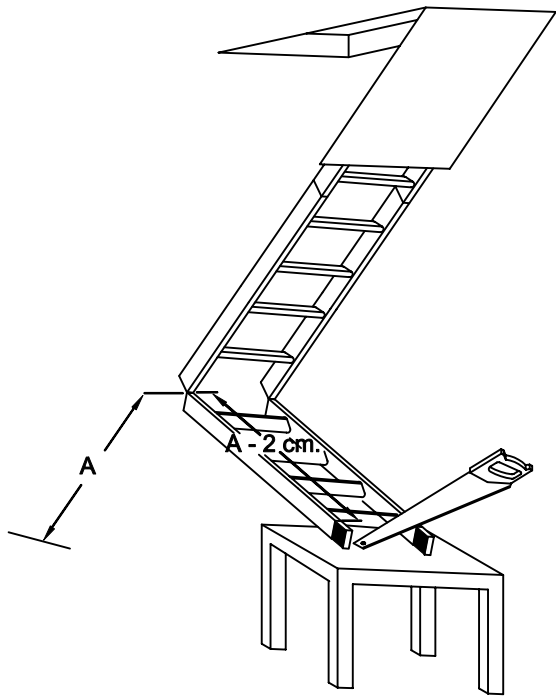



2 **DOLLE**

Einbauanleitung Kunststofffüße


1

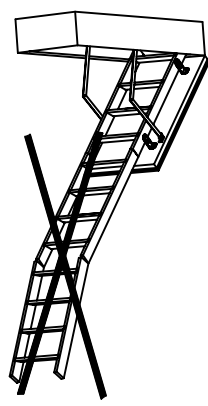


3

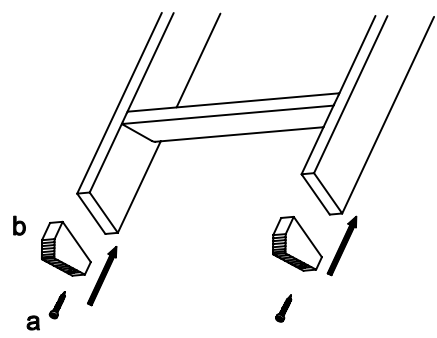

4


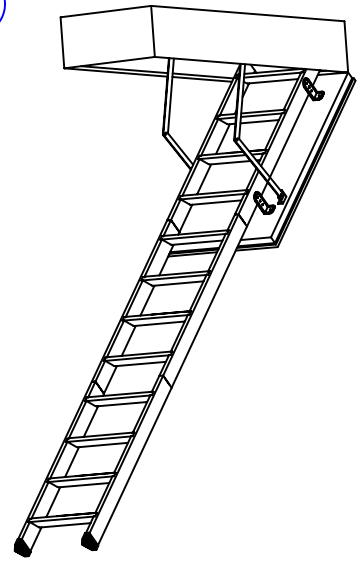


R1 99449 / 251103

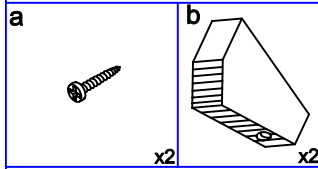


2


1

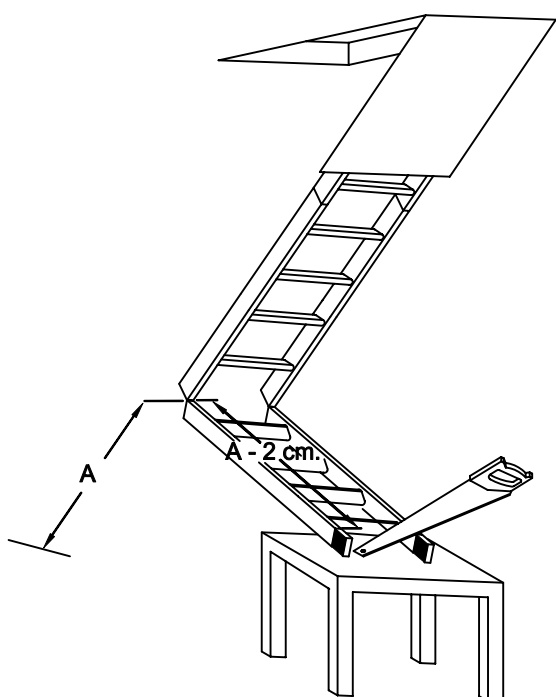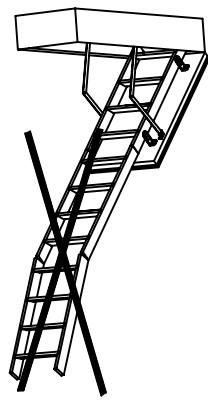

3

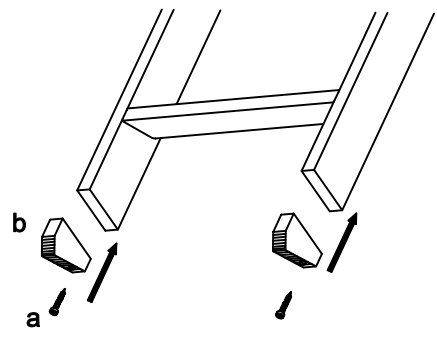

4

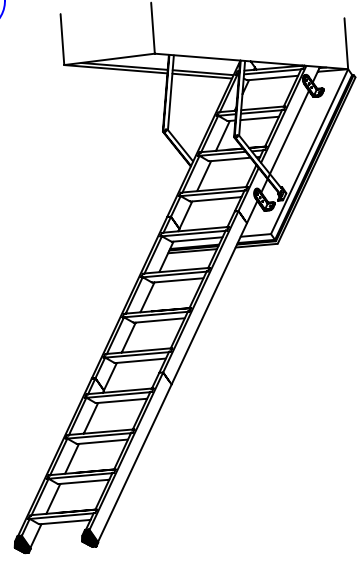

R1 99449 / 251103